


# Updating Firmware on Autopod+ RX (Leg) Box

Tools Required:	Parts Required:
<ul style="list-style-type: none"> <li>A networked PC/Mac</li> <li>USB Cable (USB A to B)</li> </ul>	<ul style="list-style-type: none"> <li>None</li> </ul>

**NOTE : You MUST update matching FW to each TX and RX box.  
If incompatible FW versions are flashed the boxes will not work correctly.**

- From the Polecam website: [polecam.com/updates](http://polecam.com/updates). Download the Zip file **FirmwareUpdateTool**.
- Select the RX Firmware file that you wish to update your RX box to, then download the zip file **RX Leg Firmware file**.
- Extract the 2 Zip files and save these folders to your desktop.
- From your file location, open the folder **AutopodFirmwareUpdateTool** and double click on the file called **AutopodFirmwareUpdateTool.exe**.
- If using a Windows Pc, you may get a popup asking you to allow the application, if this occurs, select **Yes**. A grey box will then load, this is the GUI.
- Plug the USB A cable end into the PC/Mac that you are using and then plug the USB B cable end into the RX7000 box you wish to update. At this point you will hear a “ding” (if your speakers are turned on), this is a confirmation that the USB is connected and loading drivers.

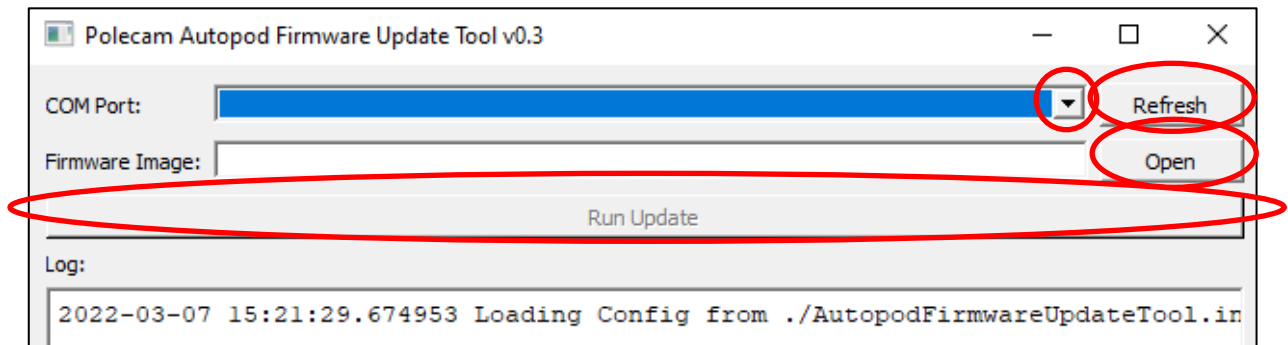

- Click on the “Refresh” box in the top right corner of the GUI, this will refresh the COM selection box; select the highest COM shown (by clicking on the arrow to the left of the refresh button).
- Click on the “Open” box in the top right corner of the GUI and navigate to where you have stored the **AutoPod+RxController\_x\_x\_xx** folder. Double click on the folder to open it and double click on the **AutoPod+RxController\_x\_x\_xx.hex** file.
- Click on the “Run Update” box in the Gui.
- At this point the update will start; you will see “Starting Update”. Once the firmware flash has completed, it will state “Update OK” in green text in the **Log:** box.
- If this does not work and you get an “Update Failed” in red, close down the GUI and start from #2.
- Once completed, unplug USB cable from the box you have just flashed and repeat steps above from #5 for each Autopod+ RX Leg box you need to update the firmware on.
- Once complete, close the Gui.
- If both Tx and Rx boxes have had their firmware updated do points 15 to 17.
- Connect the Tx and Rx boxes together with the ethernet lead and the PSU’s then, power up.
- On the Tx box navigate to **Output Protocol** and select Ethernet, ensure the boxes are communicating.
- On the Tx box navigate to the **Reset to defaults** and select OK
- If you have any issues, please contact us at [info@polecam.com](mailto:info@polecam.com).