


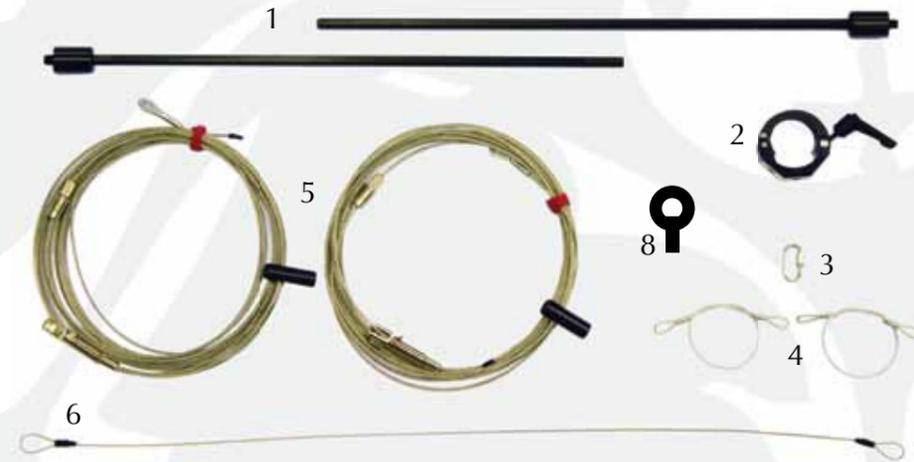

Stabiliser Rigging Instructions


List of contents

1. 2 x Bars
2. 1 x Clamp
3. 1 x Screw Link
4. 2 x Loops (Front or Rear)
5. 2 x Stabiliser cables with retainer clamps, cable caps & cable sliders fitted
6. 1 x Cross wire
7. 1 x Case
8. 1 x Eye bolt (psp users only)




Screw the 2 bars into the clamp and fit clamp onto the carbon pole in front of the monitor. Ensure clamp is firm (Dont over tighten.)

The clamp should be mounted between 900mm and 1100mm from the front of the back end section as shown below

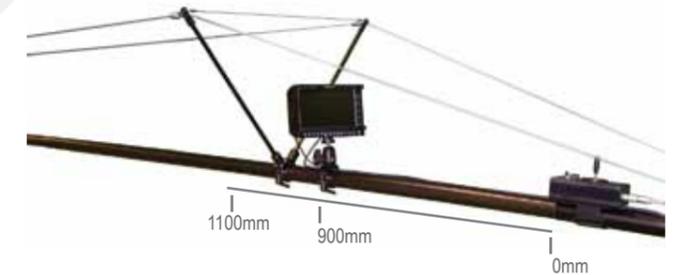

4

Fit front loop around the head clamp without trapping any of the video or control cables.

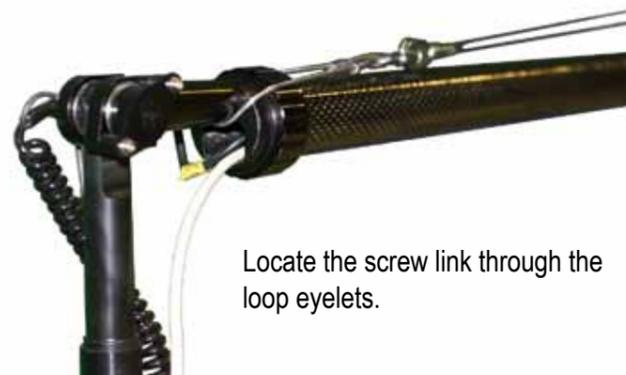

Locate the screw link through the loop eyelets.

5

Extend the 2 stabiliser cables and lay them on the floor (*one each side of the rig running front to back*) ensuring the cables are not crossed or over lapped .

Attach the 2 stabiliser cables to the screw link (*as shown*) ensure the link is closed tightly and that the left cable is kept on the left and the right cable is kept on the right .



Clip the right cable cap to the top of the right stabiliser bar and then clip the left cable cap to the top of the left stabiliser bar.



6

Select the left stabiliser cable slider clamp, open the clamp so that an eyelet of the rear loop can be affixed. Ensure the clamp is snapped shut.



Then pass the free end of the rear cable loop behind the front paddle clamp (*through the eyebolt for psp users*) as shown.

Select the right stabiliser cable clamp, connect to the free end of the rear loop, ensure the clamp is snapped shut.



7

Loosen and slide the rod retainer clamps towards the Polecam Head.




8

Remove the slack from both stabiliser cables by pulling the excess through the cable slider clamps until the pole becomes almost level on both sides.



9

To check for correct tensioning push down on the dumbbell bar (back end) and ensure both wires go taught at the same time.

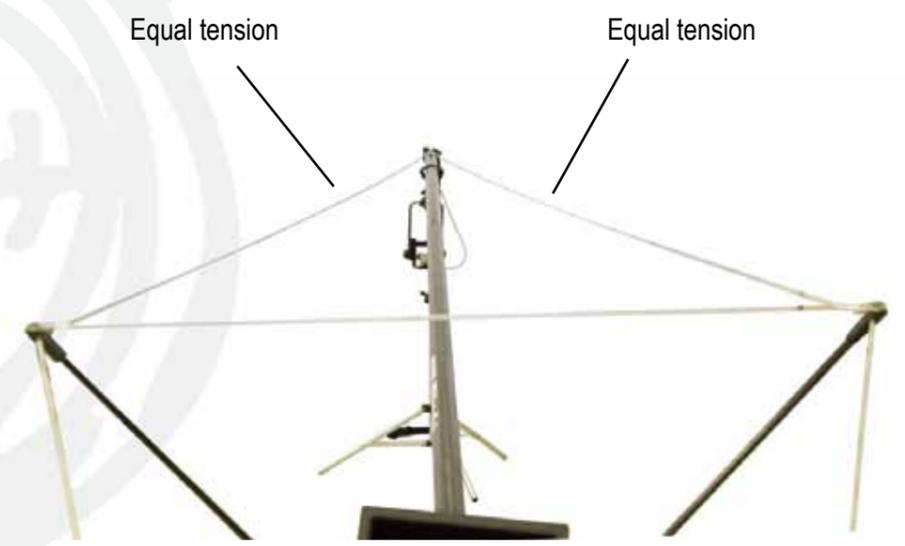

Take the cross wire and locate each eyelet within the slot on the top of each stabiliser bar cap.



Ensure clamps are finger tight



10

Slide the rod retainer clamps toward the rods till they are touching the rods when vertical. Then tighten.



11

Ensure all screw clamps are finger tight. Coil any spare cables and hang on the hook located on the back end section out of the way.



12

Contact Us

Polecam Ltd
12 Wolseley Road,
Woburn Road Industrial Estate,
Kempston,
Bedford,
MK42 7TN
England

+44 (0)1234 855 222 +44 (0)1234 855 270
sales@polecam.com www.polecam.com

